



Montage European Oak Floors are finished with a penetrating oil finish that is designed to protect your new beautiful hardwood floors without a top surface film. This allows the wood to give and take moisture in harmony with the environment around it. It also provides a dirt and wear resistant surface on the floor allowing it to last a lifetime without the need to ever re-sand.

## AFTER INSTALLATION

Must clean floor after installation prior to covering to prevent dirt and construction residue from the jobsite, use paper or cardboard. **DO NOT** tape paper or cardboard directly to the floor. **DO NOT** use any tape including Blue Tape or Mineral Spirits when installing oiled floors.

## INITIAL CLEANING

1



### Vacuum

Clean dust and dirt off the floor with a soft brush vacuum cleaner.


2



### Mop with

**WOCA Oil Refresher Soap**  
Mix 1 cup of WOCA Refresher Concentrate with 5 quarts of water in a bucket. Mop the entire floor with this mixture using a cloth mop.\*

3

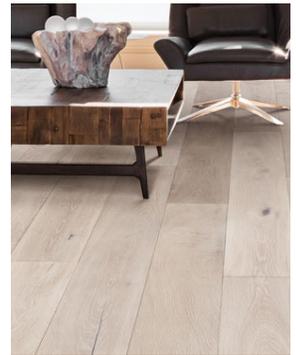

### Let it Dry

Let the floor dry for **4 to 6 hours** before allowing foot traffic and placing rugs.

\*Mop the floor gently using a wrung cloth mop. The mop should be damp, not wet. EXCESS MOISTURE CAN DAMAGE THE FLOOR.

Use WOCA Oil Refresher Soap White on white floors and WOCA Oil Refresher Soap Natural on all other floors. Please refer to After-Care Matrix. (PLEASE CONTACT THE MANUFACTURER FOR FURTHER INSTRUCTIONS)

**PLEASE WATCH THE VIDEO TO LEARN HOW TO APPLY WOCA OIL REFRESHER SOAP.**

Please refer to demo video QR Code for guidelines or visit [woodcareusa.com/video](http://woodcareusa.com/video)



## MATRIX

OIL REFRESHER  
SOAP NATURAL

CASTILLIAN  
CAMGOLI  
FORLI  
LARGO  
MESSINA  
PALMA  
RUSSO  
SIENNA  
TAVERNA  
TUSCAN

OIL REFRESHER  
SOAP WHITE

CAPRI  
LAZIO  
LEVANTE  
LIVORNO  
LUCCA  
MARCHÉ  
MONTEROSSO  
RHONE

## ROUTINE CLEANING

---

Perform Bi-Monthly or Monthly cleaning by vacuuming/sweeping and then spraying WOCA Oil Refresher Soap Spray onto the floor. Spread evenly with a clean cloth mop to clean the dirt. Let the floor dry for 1 to 2 hours before allowing foot traffic and placing rugs.

**NOTE:** Overuse of WOCA OIL Refreshing Soap may become sticky overtime on the surface of the floor. This can also lead to abnormal collection of dirt and/or gloss variations.

## NOURISH YOUR FLOORS

---

Oil finished floors should never need to be re-sanded. Traffic patterns or wear areas can be easily reduced by applying the WOCA Intensive Wood Cleaner followed by the WOCA Maintenance Oil Diamond Active. Typically in a residential application this is anywhere from 3-5 years after initial use of the floor. WOCA Maintenance Oil Diamond Active provides the floor with additional wearing properties. Use WOCA Maintenance Oil Diamond Active White on white oiled floors and Maintenance Oil Diamond Active Natural on all other floors. Follow directions on the label or refer to [www.wocausa.com](http://www.wocausa.com) for production application instructions.



## COMMERCIAL APPLICATIONS

Perform daily cleaning by vacuuming and then damp mopping with WOCA Master Soap if needed. Mix 1 cup of WOCA Master Soap Concentrate with 10 quarts of water in a bucket. Damp mop the entire floor with this mixture using a cloth mop. In addition to the Master Soap for regular cleaning, commercial spaces benefit from a monthly cleaning with WOCA Oil Refreshing Soap. Mix 1 cup of WOCA Refresher Concentrate with 5 quarts of water in a bucket.

Please contact a WOCA specialist via phone 800.242.8160 or via email [sales@wocausa.com](mailto:sales@wocausa.com) for commercial applications to provide proper cleaning regime based on the foot traffic.

## QUICK TIPS & TRICKS

---

### DO



- PLACE FELT PROTECTOR ON MOVING FURNITURE
- PLACE DOOR MAT IN FRONT OF MAIN ENTRANCE
- PROTECT FLOORING BY COVERING WALL TO WALL DURING CONSTRUCTION WITH 3" OVERLAP TO
- AVOID PAINT, SPILLS, SHEET ROCK DUST, ETC.
- MAKE SURE ANY ADHESIVE IS IMMEDIATELY WIPED OFF PRIOR TO DRYING

### DON'T



- DON'T USE ANY TAPE ON THE FLOOR INCLUDING BLUE TAPE
- DON'T USE MINERAL SPIRITS
- DON'T LEAVE SPILLS, WIPE UP IMMEDIATELY